



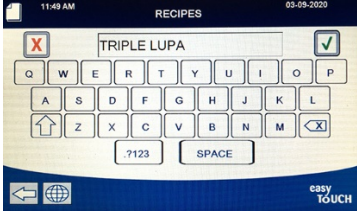

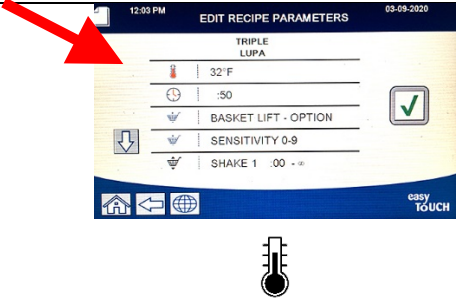





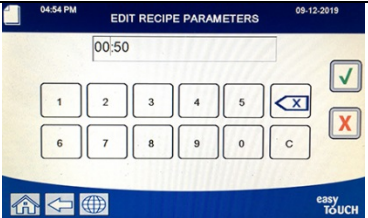



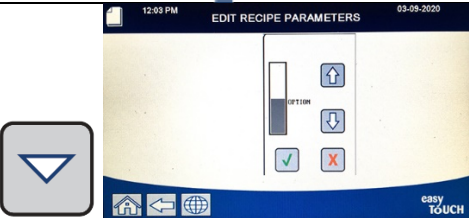


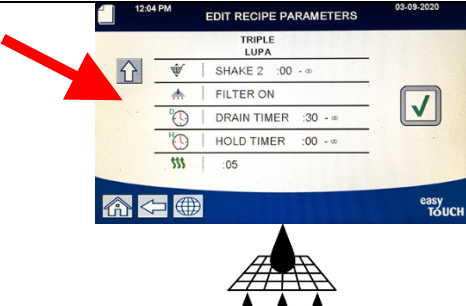
Instruction Sheet



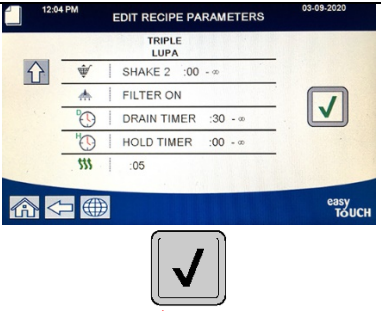

Subject: Adding Triple Lupa

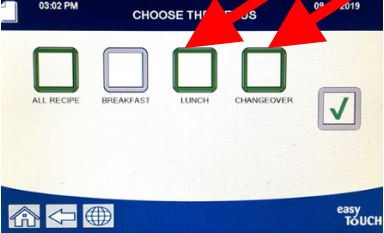





Models affected: Taco Bell FilterQuick Touch Fryers

Follow these instructions to add Triple Lupa.

DISPLAY	ACTION
	1. Press the Home button.
 RECIPES	2. Press the Recipes button.
1 6 5 0	3. Enter 1 6 5 0
	4. Press the √ (check) button.
	5. Press the green + button.
	6. Using the keyboard, enter TRIPLE . 7. Press the space bar. 8. Using the keyboard, enter LUPA .
	9. Press the √ (check) button.
	10. Press the Temperature button.

DISPLAY	ACTION
	<p>11. Use the keypad to enter 3 5 0.</p>
	<p>12. Press the √ (check) button.</p>
	<p>13. Press the cook time button.</p>
	<p>14. Use the keypad to enter 5 0.</p>
	<p>15. Press the √ (check) button.</p>
	<p>16. Ensure cook time is set to :50.</p>
	<p>17. Press the Basket Lift button.</p>
	<p>18. Press the down arrow one (1) time. Ensure OPTION is displayed.</p>
	<p>19. Press the √ (check) button.</p>
	<p>20. Press the down arrow five (5) times.</p>
	<p>21. Press the Filter button.</p>

DISPLAY	ACTION
	<p>22. Press the OFF button.</p>
	<p>23. Press the Instant On button.</p>
	<p>24. Use the keypad to enter 05.</p>
	<p>25. Press the ✓ (check) button.</p>
	<p>26. Press the ✓ (check) button.</p>
	<p>27. Press the icon to link with this product. If no icon is available press the white box.</p>
	<p>28. Press the ✓ (check) button.</p>

DISPLAY	ACTION
	<p>29. Press the LUNCH and CHANGE-OVER buttons.</p>
	<p>30. Press the √ (check) button.</p>
	<p>31. The controller displays SAVED.</p>
	<p>32. Press the √ (check) button.</p>
	<p>33. Press the home button.</p>
 CREW MODE	<p>34. Press the Crew Mode button to return to main screen.</p>